



INSTRUCTION MANUAL

Cordless/Brushless 20Volt Li-Ion AIR PUMP

Part Number: PB20VAP

IMPORTANT: Read before using.



Compatible Batteries:
PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)

www.theoriginalpinkbox.com



Keep these instructions with the accompanying tool for the life of the tool. Read all of the instructions before assembling, operating or maintaining this tool.

This manual has been compiled by **The Original Pink Box** Tools describing the purpose for which this tool has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both tool and operator safety, together with longer life of the tool itself.

All photographs and drawings in this manual are supplied by **The Original Pink Box** Tools to help illustrate the operation of the tool.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, **The Original Pink Box** Tools policy of continuous improvement determines the right to make modifications without prior warning.



*Compatible Batteries: PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)*

www.theoriginalpinkbox.com

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	Pg. 04
Electrical safety	
Personal safety	
Use and maintenance of Air Pump	
SAFETY PRECAUTIONS FOR AIR PUMP	Pg. 05
PRODUCT SPECIFICATION	Pg. 06
PARTS LIST AND SCHEMATIC DIAGRAM	Pg. 07
FUNCTION DESCRIPTION	Pg. 08
How to charge the battery pack	Pg. 08
How to install the battery	Pg. 08
Install or remove 12V automobile power adapter	Pg. 09
Connect the pneumatic chuck to the valve stem	Pg. 09
Set pressure value	Pg. 10
Storage of air hoses and accessories	Pg. 11
How to install a sports ball needle	Pg. 12
Replace the cigar lighter fuse	Pg. 12
PRODUCT MAINTENANCE	P.13

IMPORTANT SAFETY INSTRUCTIONS

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury.



When using electrical appliances, basic precautions should always be taken and observed, including the following.

ELECTRICAL SAFETY

1. To reduce the risk of electrical shock, do not put inflator in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
2. Use this product only with batteries and chargers.

PERSONAL SAFETY

1. When operating the inflator, keep alert, observe what you are doing, and use common sense. Do not use the inflator when you are tired or under the influence of drugs, alcohol or drugs. Inattention when operating the inflator may cause serious personal injury.
2. When operating the inflator, always maintain a proper foothold and balance. The correct foothold and balance can better control the inflator in unexpected situations.
3. Goggles shall be worn during use, and dust-proof masks, anti-skid safety shoes, hard hats or hearing protection devices must be used if necessary.
4. Do not wear loose clothes and keep long hair. Loose clothes, jewelry or long hair may be sucked into the air inlet, causing wind blockage and even damaging the machine.
5. Do not use on ladders or unstable supports. A stable foothold on a solid ground can better control the inflator in case of accidents.
6. Do not disassemble the inflator. Do not operate the inflator near flammable liquid or in gas or explosive environment. Internal sparks may ignite smoke.
7. Do not store the inflator in a humid or high-temperature environment. Do not store at a temperature below 10 ° C or above 35 ° C.

USE AND MAINTENANCE OF AIR PUMP

1. Before each use, check whether the hose is fragile or worn to ensure that all connections are secure. Do not use if defects are found. Purchase new hoses or notify an authorized service center for inspection or repair.
2. Slowly release all pressure in the system, dust and debris may be harmful. If the switch cannot be opened or closed, do not use the inflator. The inflator that cannot be controlled by the switch is dangerous and must be repaired.
3. Before making any adjustment, replacing accessories or storing the inflator, please put the switch in the off position. Such preventive safety measures can reduce the risk of accidentally starting the inflator.
4. Store idle inflators out of reach of children and other untrained personnel. Inflators are dangerous in the hands of untrained users.

IMPORTANT SAFETY INSTRUCTIONS

5. Check whether the moving parts are misaligned or stuck, whether the parts are broken and any other conditions that may affect the operation of the inflator. If damaged, please repair the inflator before use. Many accidents are caused by poorly maintained tools.
6. Use only accessories recommended by the manufacturer for your model. Accessories suitable for one inflator may cause injury risk when used on another inflator.
7. Keep the inflator and its handle dry, clean and free of grease. Always use clean cloth when cleaning. Never use brake fluid, gasoline, petroleum products or any strong solvent to clean the inflator. Following this rule will reduce the risk of loss of control and deterioration of the shell plastic.
8. Do not point any inflator at yourself or others.
9. Keep the outside of the inflator dry, clean and free of oil and grease. Always use clean cloth when cleaning. Do not use brake fluid, gasoline, petroleum products or any strong solvent to clean the device. Following this rule will reduce the risk of deterioration of the shell plastic.
10. Do not exceed the pressure rating of any component in the system.
11. Protect material and air lines from damage or puncture. Keep hoses and power cords away from sharp objects, chemical leaks, oil, solvents and wet floors.

SAFETY PRECAUTIONS FOR INFLATOR

1. Only qualified maintenance personnel can repair the inflator. Repair or maintenance by unqualified personnel may cause injury risk. Only use the same replacement parts when servicing the inflator. Follow the instructions in the maintenance section of this manual. The use of unauthorized parts or non-compliance with maintenance instructions may result in the risk of electric shock or injury.
2. Understand your inflator, carefully read the operation manual, understand its application and limitations, and specific potential hazards related to this tool. Following this rule will reduce the risk of electric shock, fire or serious injury.
3. Explosion risk: do not operate the inflator so that the output pressure is greater than the marked maximum pressure of the object to be inflated. Do not use it under a pressure greater than 6.8 PA.
4. In order to reduce the risk of electric shock, do not get wet and store indoors.
5. Check the device for cracks, pinholes or other defects that may make the inflator unsafe. Do not cut or drill holes on the inflator.
6. Ensure that there is no obstacle or hose winding in the hose. Do not block the inflation or deflation outlet during operation, which may cause the inflator to lose balance and damage the machine.
7. Use the inflator only for its intended use and do not change or modify the original design or function of the device.
8. Be careful that misuse and improper operation of this inflator may cause injury to yourself and others. Do not leave the inflator unattended when the air hose is connected to the inflator.
9. Do not continue to use the inflator or hose with air leakage or abnormal function.
10. When adjusting, repairing or not using the inflator, be sure to disconnect the air source and power supply.

SAFETY PRECAUTIONS FOR INFLATOR

11. Do not attempt to pull or carry the inflator through the hose.
12. In addition to all safety rules of the inflator, all safety regulations recommended by the inflator manufacturer must be observed. Following this rule will reduce the risk of serious personal injury.
13. This product is only for family use, not for industrial production.
14. Do not use the inflator as a breathing device, do not spray compressed air onto people or animals, and do not blow dust and dirt to yourself or others. Following this rule will reduce the risk of serious injury.
15. Protect the lungs. If there is dust during operation, please wear a mask or dust mask. Following this rule will reduce the risk of serious personal injury.
16. Do not use this inflator to spray chemicals. Toxic fumes or chemicals may damage the parts of the inflator.
17. Burst risk: carefully monitor the object during inflation to reduce the risk of over inflation. During inflation, use reliable pressure gauge regularly. The pressure gauge on the inflator is only for reference, so it has no binding force on the accurate value.
18. Keep these instructions: always refer to them and use them to guide others who may use this inflator. If you lend this inflator to others, also lend them these instructions.

SPECIFICATIONS

Great for Car/RV/SUV/Light Truck Tires and small inflatables

Digital pressure gauge automatically shuts off at desired pressure

Cordless design, easy to carry

Comes with nozzle accessories

Operate with 20V battery (**NOT INCLUDED**) or 12V Car Plug-in Power Cord

Built-in battery indicator




Compatible Batteries:
PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)

www.theoriginalpinkbox.com

PARTS LIST AND SCHEMATIC DIAGRAM

- A. Digital display
- B. Start switch
- C. Set button
- D. Light switch
- E. Tire pressure increase/decrease button
- F. Rubber cover handle
- G. Battery **(NOT INCLUDED)**
- H. LED lighting
- I. Air hose buckle
- J. Air hose
- K. Air chuck
- L. Nozzle interface storage area
- M. Air inlet
- N. 3PC Adapter Set:
Bike Tire Valve Nozzle, Sports
Ball Needle and Inflating Adapter
- O. 12V Car Plug-in Power Cord

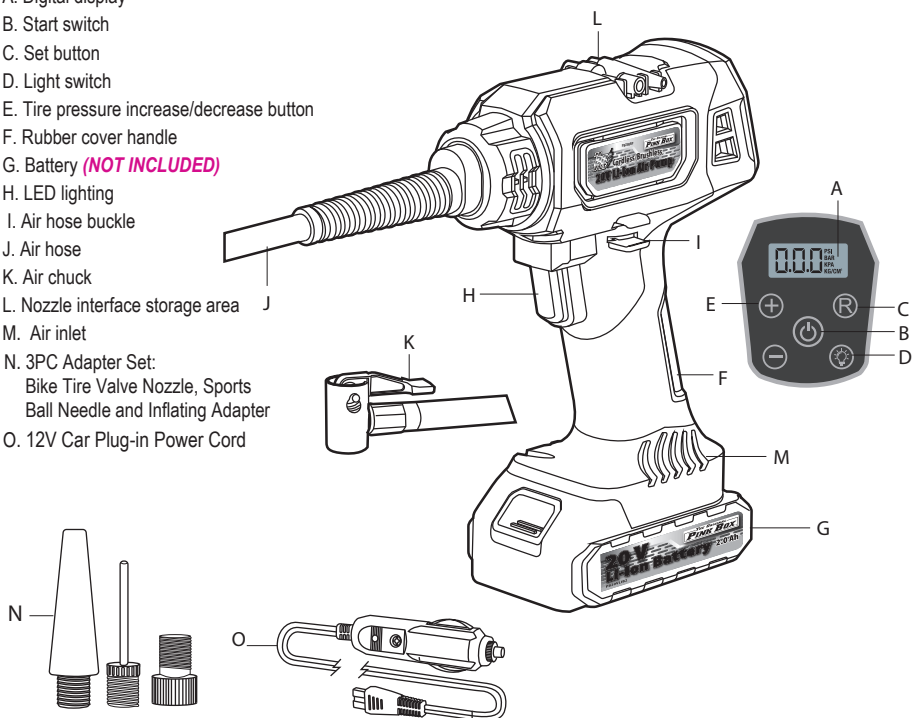

Compatible Batteries:
PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)

www.theoriginalpinkbox.com

FUNCTION AND OPERATION INSTRUCTIONS

HOW TO INSTALL THE BATTERY

Step 1:
Install battery pack or 12V car power adapter

■ **Install or Remove the battery pack (Figure 3)**


To install:

Slide the battery pack into the bottom until you hear a click. Make sure that the latch is in place and battery is secure before operation.

To remove:

Pull out the battery pack while pressing the battery release latch.

Fig. 3

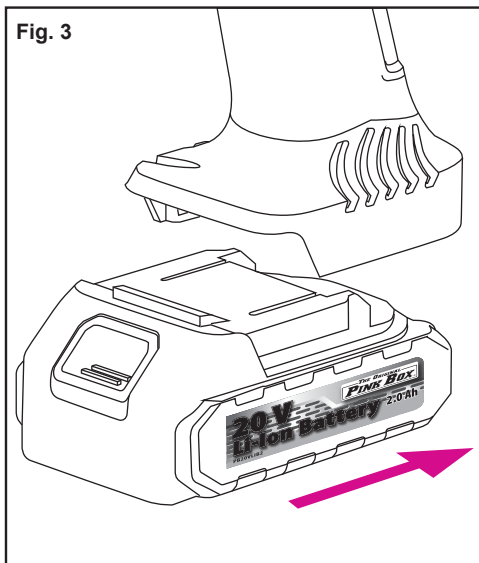

Compatible Batteries:
PB20VL1B2 Battery (2.0 Ah)
& PB20VL1B4 Battery (4.0 Ah)

www.theoriginalpinkbox.com

FUNCTION AND OPERATION INSTRUCTIONS

■ install or remove 12V car power adapter (Figure 4)

1. Unravel cord before using. If the battery is installed, remove it from the machine first by pressing battery release button and pulling out..
2. Plug the 12V car power adapter into the machine.
3. Connect the adapter into the car socket. When ready to use, power car on..

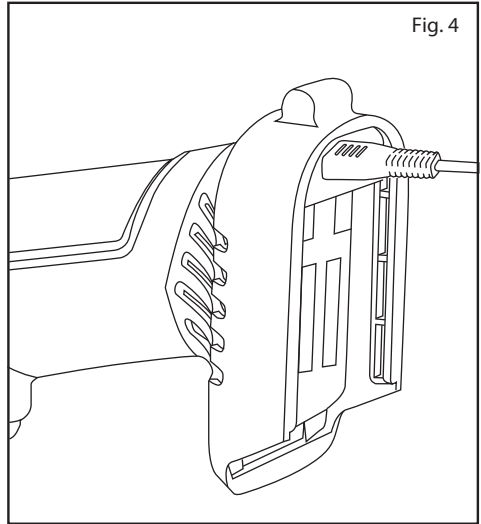


Fig. 4

Step 2:

Connect the Air Chuck to the Valve Stem

1. Push the air chuck clamp up so that it is in the unlock position.
2. Then place the air chuck on the valve stem and make sure the threaded section of the valve stem is inside the air chuck.
3. Pressing air chuck clamp down until it stops or is parallel with the air hose.

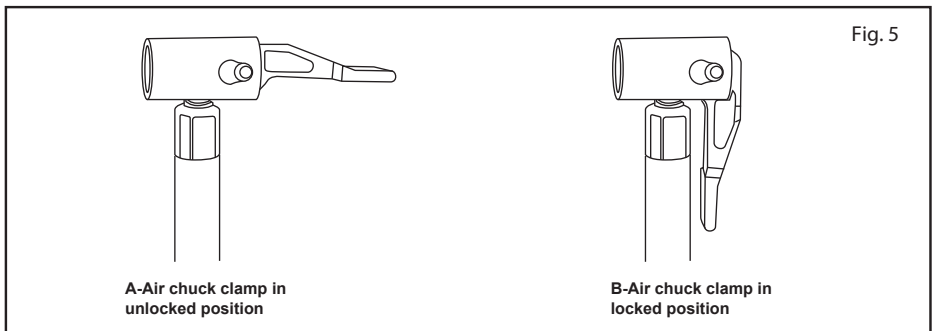


Fig. 5

Note:

Improperly connected hoses or accessories may separate under pressure and pressure and cause serious injury.

Possible air leaks can cause incorrect pressure readings. Ensure that all connections are secure.


FUNCTION AND OPERATION INSTRUCTIONS

Note:

When using the inflator, make sure that the hose is free of obstacles. If the hose is blocked, it may be overheated.

Step 3: set the pressure value

Fig. 6

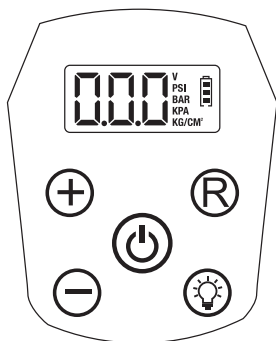

1. Press the "⏻" (on / unit) button to read the current tire pressure on the gauge.
2. Press the "R" button again to select the tire pressure measurement unit from PSI, KPA, BAR, KG/CM.
3. Press the "+" or "-" button to adjust the preset tire pressure. (1) Long press the "+" or "-" button to quickly adjust the working pressure. (2) Short press the "+" or "-" button to adjust the preset working pressure.
Note: increment by 0.05BAR & KG/ CM, 1 PSI, 5KPA.
4. The preset pressure value will be set after three seconds.
5. Press the start switch to inflate. When it reaches the preset pressure value, the inflator will stop working.
6. Press the "⏻" button (on / unit), then press the "💡" button, the LED light is turned on.
And press the "💡" button again, the LED light will be flashing.

Note: the tolerance of inflator is + or - 2 psi. If it is used continuously every 10 minutes, a cooling time of 3 minutes is required.

1. To reset the tire pressure measurement unit press "⏻" to reselect after setting preset pressure value;
2. The digital gauge records the preset measurement unit and the value of the last operation;
3. After the air pump reaches the preset pressure value, the digital gauge will automatically shut down after 60 seconds;
4. The maximum pressure is 120 psi.

FUNCTION AND OPERATION INSTRUCTIONS



Note:

1. Since the pressure gauge is not calibrated and not binding for exact values, tire pressure must be checked by using a reliable measuring device after inflating tires with this pump. Driving a vehicle with improperly inflated tires could result in serious injury.
2. Do not leave items that being pumped up unattended while using the inflator. These items can burst and could cause serious injury.
3. The inflator is capable of inflating up to 6.8 Bar. To avoid over inflation, carefully follow instructions on items to be inflated. To avoid product damage, never exceed recommended pressures.
4. The inflator is not designed for commercial applications.

Storage of air hoses and accessories

When the inflator is not used, put the hose into the storage area on both sides of the tool.

The adaptors and needles provided with the inflator can also be placed in the storage area.

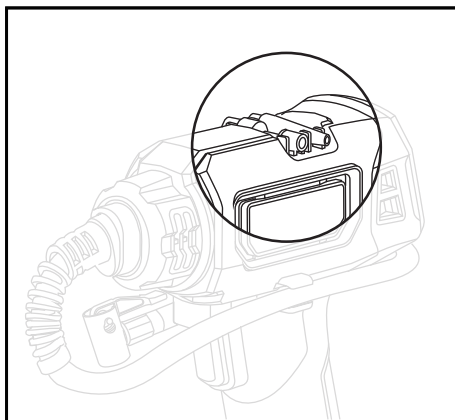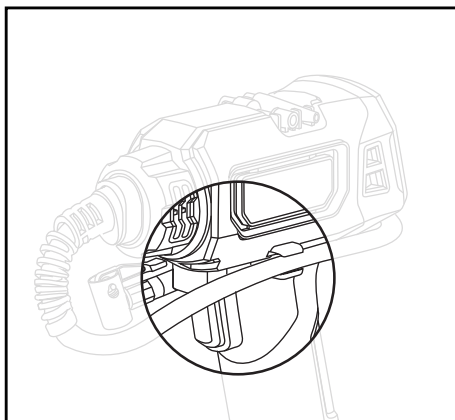

FUNCTION AND OPERATION INSTRUCTIONS

Parts

The accessories provided have a variety of functions: the conical adapter can be used on the smaller pinch valve to inflate small items such as children's toys. Usually, the user needs to blow air to inflate them. The sports ball needle can be used to inflate various types of balls or any other items that need to inflate the sports ball needle.


Note: When inflating items of 10 psi or less, after each burst of short-term continuous inflation, check by feeling or using a calibrated measuring device to determine the accurate pressure.

How to install the ball needle?

For inflating sport balls like basketball, football, etc.

The following pictures show to hoop up the nozzle to air chuck.


Note: do not completely insert the ball needle into the air chuck to prevent the exhaust needle hole from being completely blocked.

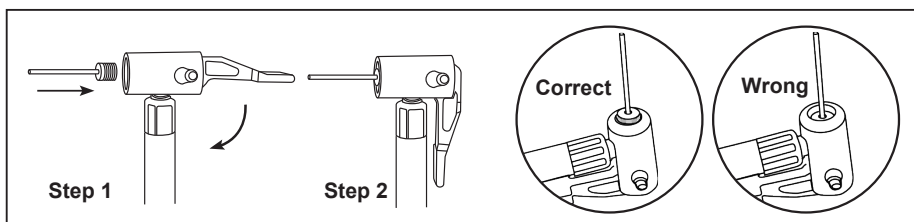

Replace the cigar lighter fuse?

If the cigar lighter can not provide power for the inflator, check the fuse and see if it is broken.

As shown below, unscrew the head of the cigar lighter, take out the broken fuse, replaced by the new fuse, and screw the head.

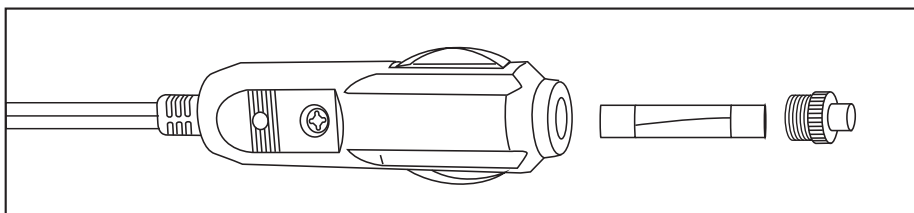

PRODUCT MAINTENANCE

1. Do not let brake fluid, gasoline, petroleum products, penetrating oil, etc. contact with plastic parts. Chemicals may damage, weaken or break plastic, resulting in serious machine injury.
2. Wipe the surface of the machine with a soft wet cloth to keep the surface of the inflator clean. Do not use solvents on plastic parts.
3. When cleaning plastic parts, avoid using solvents. Most plastics are easily damaged by various irritating solvents and can be damaged due to use. Use clean cloth to remove dirt, dust, oil, grease, etc.
4. In order to maintain the best performance of the rechargeable battery, please prevent the battery from overheating, including overcharging and storage, and do not use the machine for a long time.



*Compatible Batteries: PB20VLIB2 Battery (2.0 Ah)
& PB20VLIB4 Battery (4.0 Ah)*

www.theoriginalpinkbox.com